

POPCORN OPERATIONAL TIPS

SWITCHES

- a. LIGHT AND WARMER SWITCH TURNS ON HEAT LAMP AND OPTIONAL STRIP HEATER UNDER CORN PAN.
- b. KETTLE MIXER SWITCH TURNS ON MOTOR THAT DRIVES KETTLE AGITATOR SHAFT.
- c. KETTLE HEAT SWITCH TURNS ON HEAT ELEMENT INSIDE KETTLE.
- *NOTE: <u>DO NOT</u> COVER AIR VENT HOLE! MOTOR AIR INTAKE AND EXHUAST HOLES ARE LOCATED AT TOP OF MACHINE AND MUST BE KEPT CLEAR OF ANY OBSTRUCTIONS.
- *AVOID SERIOUS BURNS!!! DO NOT TOUCH THE KETTLE WHILE IT IS HOT.
- 1. TURN ON KETTLE HEAT SWITCH AND KETTLE MOTOR.
- 2. "TEST POP" A KETTLE OF CORN: PLACE OIL MEASURE IN KETTLE WITH 3 CORN KERNELS; ONCE KERNELS HAVE BEGUN POPPING, PLACE REMAINEDER OF OIL IN KETTLE AND CLOSE LID.
- 3. WHEN CORN HAS POPPED, ROTATE HANDLE TO EMPTY KETTLE; RETURN KETTLE TO UPRIGHT POSITION.
- 4. REPEAT THIS CYCLE; SUBSEQUANT BATCHES ARE ALWAYS MORE FLAVORFUL THAN INTIAL BATCH.
- 5. TURN OFF KETTLE HEAT SWITCH ON THE FINAL BATCH WHEN POPCORN BREAKS OVER THE LID OF THE KETTLE TO ELIMINATE SMOKE AND ODOR.
- 6. TURN OF KETTLE HEAT AND KETTLE MOTOR SWITCHES.
- 7. WIPE EXTERIOR OF KETTLE WITH HEAVY CLOTH AFTER COOLOING OF KETTLE TO PREVENT BURN OR STAIN OF OIL DRIPPING.

TO CLEAN

- 1- ALLOW KETTLE TO COOL UNTIL WARM ENOUGH TO HANDLE.
- 2- UNPLUG KETTLE AND REMOVE FROM MACHINE.
- 3- WIPE KETTLE, KETTLE LID, CROSSBAR, AND EXTERIOR CLEAN. a. DO NOT IMMERSE KETTLE IN WATER!!
- 4- REMOVE POPPED CORN AND PLACE IN BAGS.
- 5- REMOVE "OLD MAID" PAN EMPTY UNPOPPED KERNELS AND WIPE CLEAN
- 6- WIPE INTERIOR OF MACHINE CLEAN.
- 7- RETURN THE MACHINE CLEAN TO AVOID CLEANING CHARGES.

ALSO PRINTED ON MACHINE*