



SKNO-KONE MACHINE

INCLUDES AND 110 VOLT, SINGLE PHASE, 60 CYCLE, AC CURRENT MOTOR WITH A TOGGLE SWITCH, SHAVING UNIT, DISPENSING CASE, AND SEPARATE LIGHT SWITCH INSIDE THE CASE. A CUTTERHEAD IS MOUNTED ON THE END OF THE MOTOR SHAFT INSIDE THE SHAVER BODY (GOOSENECK). THE PUSHER HANDLE PRESSES THE ICE AGAINST THE REVOLVING CUTTERHEAD TO PRODUCE THE SHAVED ICE.

*NOTE: THE MACHINE MUST BE PROPERLY GROUNDED TO PREVENT ELECTRICAL SHOCK.

TIPS

1. START THE MOTOR AND FILL GOOSENECK AN INCH FROM THE TOP WITH ICE CUBES OR 3"X4" PIECES OF ICE. (THE LARGE THE ICE THE BETTER THE SNOW)
2. PUSH ICE DOWN AGAINST THE CUTTERHEAD WITH FIRM PRESSURE FOR BEST SNOW (TOO MUCH = COARSE SNOW; TOO LITTLE = MUSHY).
3. DO NOT FORCE THE HANDLE.
4. A SURFACE TEMPERATURE OF 150° F IS NORMAL.
5. PUT ONLY ICE IN THE GOOSENECK TO PREVENT DAMAGE TO THE BLADES.
6. KEEP FINGERS AWAY FROM SHAVER BODY WHEN MOTOR IS RUNNING TO PREVENT INJURY.

CLEANING INSTRUCTIONS

1. UNPLUG THE MACHINE.
2. WIPE ALL SURFACES CLEAN TO AVOID CLEANING CHARGES

****INSTRUCTIONS PRINTED ON MACHINE****